



Ibiza

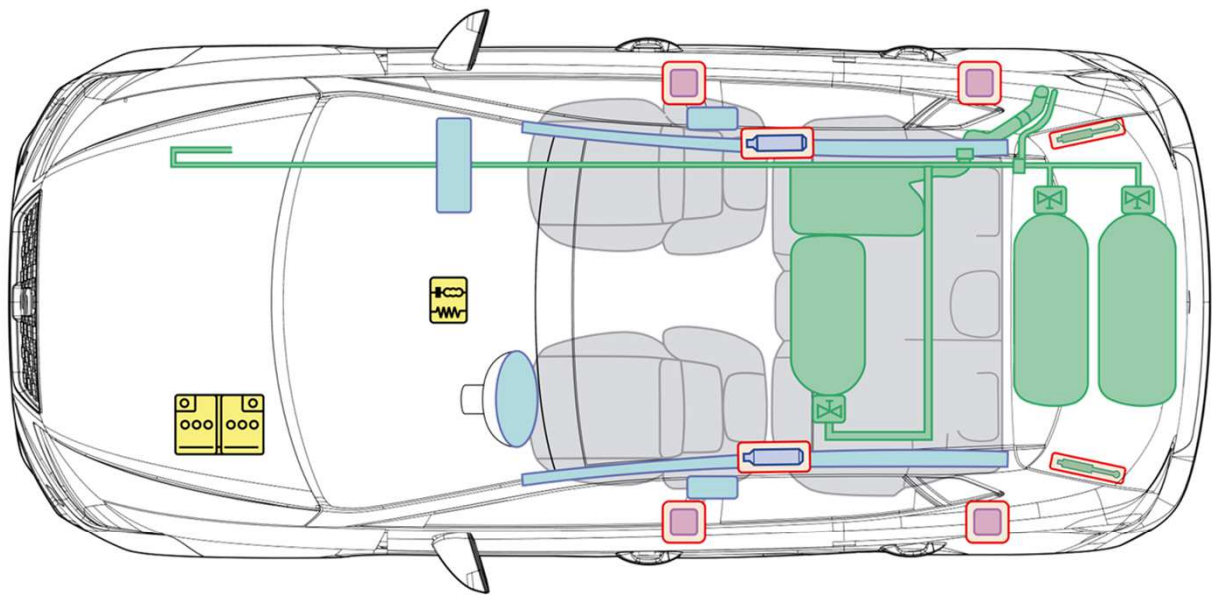

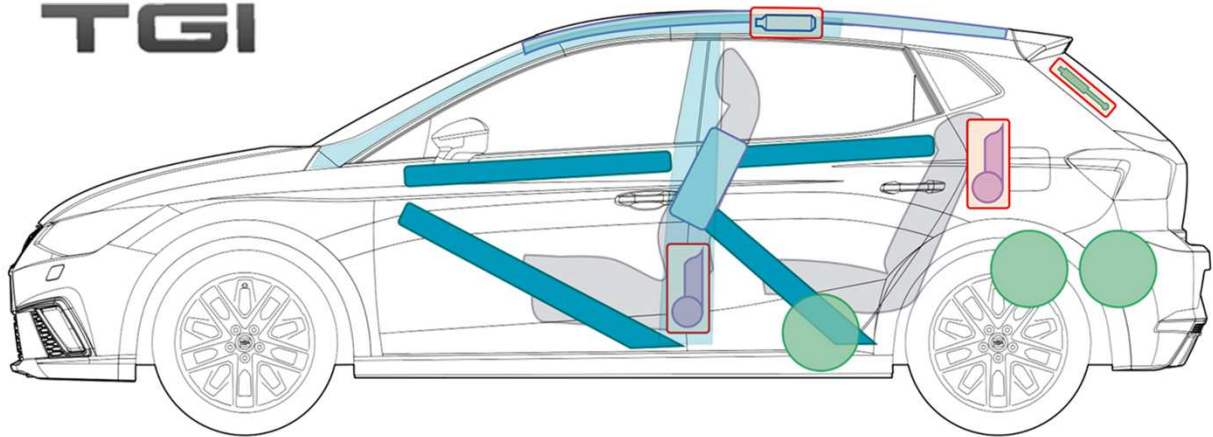


 
 



[5 Doors, TGI, from 2018]



TGI



Legend

	Airbag		Bodywork reinforcement		Control unit
	Gas generator		Gas pressure dampers		Battery
	Belt tensioner		Safety valve		Fuel tank
	Gas tank				



Ibiza [5 Doors, TGI]




Information on the natural gas system


Shutting off the gas tanks manually

(if there is a smell of gas or a gas leak)

1. Accessing the natural gas tanks

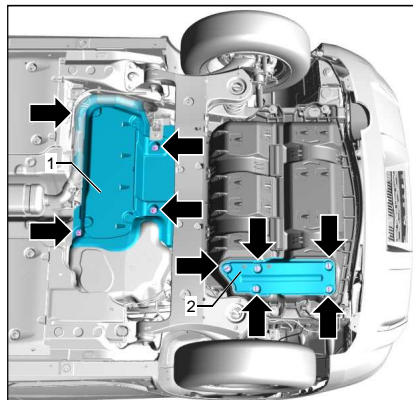


- Access to the tanks is from the underbody.
- The gas tanks are covered with a plastic cover -1- and -2-. In order to gain access to the natural gas tanks, this cover must be removed by suitable means – arrows-, without damaging the underlying components of the gas system.

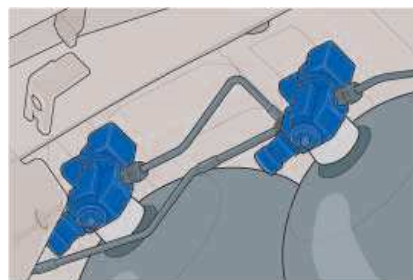

Electromagnetic shut-off valves on the gas tanks

2. Locating the shut-off valves

- Each gas tank has its own cylinder valve with a manual shut-off valve.

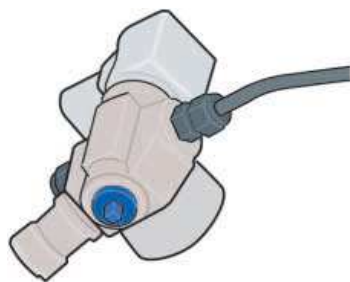

Manual shut-off valve on the foot of the cylinder valve.

3. Closing the gas tank by hand

- If necessary due to operational needs, each gas tank must be shut-off separately.
- A size 5 spanner or open-ended wrench can be used to close the manual shutoff valve by turning the square head bolt clockwise one half turn.

Note:

The valve includes the markings "C" [closed] and "O" [open].